


**RXM plug-in relays, "miniature type"**

- Spring return test button for testing the contacts (standard)
- Green LED indication of relay status (depending on version)
- Mechanical indication of relay status (standard)
- Plug-in protection module to protect against electrical spikes
- Plug-in jumper bars for coil terminals to avoid time consuming wiring

Part Number*	Contacts	Thermal Current (A)	function indication
<b>115163●●</b>	2C/O	12	without LED
<b>115174●●</b>	2C/O	12	with LED
<b>115185●●</b>	3C/O	10	without LED
<b>115196●●</b>	3C/O	10	with LED
<b>115207●●</b>	4C/O	6	without LED
<b>115218●●</b>	4C/O	6	with LED
<b>115229●●</b>	4C/O	3	without LED
<b>115240●●</b>	4C/O	3	with LED



**\*Replace ●● with the letter of coil voltage according to the following table:**

<b>AC voltage</b>	12	24	60	48	110
<b>●●</b>	<b>JD</b>	<b>BD</b>	<b>ND</b>	<b>ED</b>	<b>FD</b>
<b>DC voltage</b>	24	48	120	230	
<b>●●</b>	<b>B7</b>	<b>E7</b>	<b>F7</b>	<b>P7</b>	